

RXP 101: Air-volume adding relay

How energy efficiency is improved

For the reliable and demand-led control of air in laboratories.

Areas of application

Synchronisation of room air in laboratories, can also be used in Zone 1 potentially explosive areas.

Features

- Maximum of 4 inputs for actual values
- Easy adjustment of exact partial air volumes using adjusters
- ATEX certification for use in Zone 1 potentially explosive areas
- Conformity tested as per EN 13463-1 and EN 1127-1 (Ex II 2 G T6)
- Compressed-air connections with Rp 1/8" female thread

Technical description

- Supply pressure 1.3 bar \pm 0.1
- Four inputs for:
 - room return air
- One output for:
 - command variable signal for supply-air controller
- Setpoint adjuster for weighting partial volumes and setpoint adjustment ΔV



T03059



Y03186

Type	Function	Air capacity	Air consumption ¹⁾	Weight kg
RXP 101 F001	addition of 4 air volumes	400 l _n /h	40 l _n /h	0,7
Supply pressure ²⁾	1,3 bar \pm 0,1	Permissible amb. temp.		0...55 °C
Input pressures	0,2...1,0 bar	Connection diagram		A03187
Output pressure	0,2...1,0 bar	Dimension drawing		M297100
Setpoint shift $\Delta \checkmark$	3...20% \checkmark	Fitting instructions		MV 505207
Control action	A			

¹⁾ Without transducer; air consumption for transducer connections 3, 4, 5 and 6 is 33 l_n/h each

²⁾ See Section 60 on regulations concerning the quality of supply air, especially at low ambient temperatures

Operation

Using the adjustment knobs (x3, x4, x5 and x6), the pressure at each of the connections 3, 4, 5 and 6 (e.g. output pressure of an RLP controller) is weighted and then added together with the others. Each of the partial air volumes can, therefore, be multiplied by a certain factor (percentage share of the total volume flow) and then, in the addition unit, be united in correct proportion to the total volume flow.

Using the $\Delta \checkmark$ adjuster (for setpoint shift), the room supply-air rate can be reduced with respect to the room exhaust-air rate, thereby affecting the under-pressure in the room. If more than four air volumes have to be converged, then a second unit can be connected. If less than four volume flows are cumulated, then the spare connections should not be closed off.

Архангельск (8182)63-90-72
 Астана +7(7172)727-132
 Белгород (4722)40-23-64
 Брянск (4832)59-03-52
 Владивосток (423)249-28-31
 Волгоград (844)278-03-48
 Вологда (8172)26-41-59
 Воронеж (473)204-51-73
 Екатеринбург (343)384-55-89
 Иваново (4932)77-34-06
 Ижевск (3412)26-03-58
 Казань (843)206-01-48

Калининград (4012)72-03-81
 Калуга (4842)92-23-67
 Кемерово (3842)65-04-62
 Киров (8332)68-02-04
 Краснодар (861)203-40-90
 Красноярск (391)204-63-61
 Курск (4712)77-13-04
 Липецк (4742)52-20-81
 Магнитогорск (3519)55-03-13
 Москва (495)268-04-70
 Мурманск (8152)59-64-93
 Набережные Челны (8552)20-53-41

Нижний Новгород (831)429-08-12
 Новокузнецк (3843)20-46-81
 Новосибирск (383)227-86-73
 Орел (4862)44-53-42
 Оренбург (3532)37-68-04
 Пенза (8412)22-31-16
 Пермь (342)205-81-47
 Ростов-на-Дону (863)308-18-15
 Рязань (4912)46-61-64
 Самара (846)206-03-16
 Санкт-Петербург (812)309-46-40
 Саратов (845)249-38-78

Смоленск (4812)29-41-54
 Сочи (862)225-72-31
 Ставрополь (8652)20-65-13
 Тверь (4822)63-31-35
 Томск (3822)98-41-53
 Тула (4872)74-02-29
 Тюмень (3452)66-21-18
 Ульяновск (8422)24-23-59
 Уфа (347)229-48-12
 Челябинск (351)202-03-61
 Череповец (8202)49-02-64
 Ярославль (4852)69-52-93

Единый адрес для всех регионов: sxr@nt-rt.ru || www.sauter.nt-rt.ru

Software

A calculation program is available for working out the values to be entered on the adding unit.

Dimension drawing

